

Tele Converter

Q Are Tamron tele converters for Nikon compatible with Nikon cameras?

A Tamron tele converters for Nikon can be used in the following combinations.

It cannot be used with other lenses.

AF: Autofocus can be used.

AF (F8): AF points compatible with a maximum aperture of f/8 or faster.

MF: Only manual focus can be used.

<Notes>

- When shooting subjects with low contrast and/or luminosity values, the camera may be unable to focus.
- Photographic data such as focal length may be displayed incorrectly.
- If you have questions regarding the compatibility of camera models other than the ones listed, please contact your nearest Tamron distributor. For a list of Tamron distributors, click [here](#).

As of 04/2019

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
SP 150-600mm G2 (Model A022)	TELE CONVERTER 1.4x (Model TC-X14)	–	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D7500, D7200, D7100, D500	D3X, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100
	TELE CONVERTER 2.0x (Model TC-X20)	–	–	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D3X, D7500, D7200, D7100, D500, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100

TAMRON

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
100-400mm (Model A035)	TELE CONVERTER 1.4x (Model TC-X14)	-	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D7500, D7200, D7100, D500	D3X, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100
	TELE CONVERTER 2.0x (Model TC-X20)	-	-	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D3X, D7500, D7200, D7100, D500, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
70-210mm F4 (Model A034)	TELE CONVERTER 1.4x (Model TC-X14)	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D3X, D7500, D7200, D7100, D500, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100	-	-
	TELE CONVERTER 2.0x (Model TC-X20)	-	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D7500, D7200, D7100, D500	D3X, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
SP 70-200mm G2 (Model A025)	TELE CONVERTER 1.4x (Model TC-X14) TELE CONVERTER 2.0x (Model TC-X20)	D850, D810A, D750, D810, D610, D600, D800E, D800, D5, D4S, Df, D4, D3X, D7500, D7200, D7100, D500, D7000, D300S, D5600, D5500, D5300, D5200, D5100, D5000, D3500, D3400, D3300, D3200, D3100	-	-

Tele Converter

Q Are Tamron tele converters for Canon compatible with Canon cameras?

A Tamron tele converters for Canon can be used in the following combinations. It cannot be used with other lenses.

AF: Autofocus can be used.

AF (F8): AF points compatible with a maximum aperture of f/8 or faster.

MF: Only manual focus can be used.

<Notes>

- When shooting subjects with low contrast and/or luminosity values, the camera may be unable to focus.
- Photographic data such as focal length may be displayed incorrectly.
- If you have questions regarding the compatibility of camera models other than the ones listed, please contact your nearest Tamron distributor. For a list of Tamron distributors, click [here](#).

As of 03/2020

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
	TELE CONVERTER 1.4x (Model TC-X14)	—	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II	EOS 6D, EOS 5D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D
SP 150-600mm G2 (Model A022)	TELE CONVERTER 2.0x (Model TC-X20)	—	—	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 6D, EOS 5D Mark II, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
100-400mm (Model A035)	TELE CONVERTER 1.4x (Model TC-X14)	-	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II	EOS 6D, EOS 5D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D
	TELE CONVERTER 2.0x (Model TC-X20)	-	-	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 6D, EOS 5D Mark II, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D

TAMRON

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
70-210mm F4 (Model A034)	TELE CONVERTER 1.4x (Model TC-X14)	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 6D, EOS 5D Mark II, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D	-	-
	TELE CONVERTER 2.0x (Model TC-X20)	-	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II	EOS 6D, EOS 5D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D

TAMRON

Lens	Tele Converter	Camera		
		AF	AF (F8)	MF
SP 70-200mm G2 (Model A025)	TELE CONVERTER 1.4x (Model TC-X14) TELE CONVERTER 2.0x (Model TC-X20)	EOS 5Ds R, EOS 5Ds, EOS 6D Mark II, EOS 5D Mark IV, EOS 5D Mark III, EOS-1D X Mark III, EOS-1D X Mark II, EOS-1D X, EOS 6D, EOS 5D Mark II, EOS 9000D (77D), EOS Kiss X9i (Rebel T7i / 800D), EOS 80D, EOS 7D Mark II, EOS Kiss X90 (Rebel T7 / 2000D / 1500D), EOS Kiss X9 (Rebel SL2 / 200D), EOS Kiss X80 (Rebel T6 / 1300D), EOS 8000D (Rebel T6s / 760D), EOS Kiss X8i (Rebel T6i / 750D), EOS Kiss X70 (Rebel T5 / 1200D / Hi), EOS Kiss X7i (Rebel T5i / 700D), EOS Kiss X7 (Rebel SL1 / 100D), EOS Kiss X6i (Rebel T4i / 650D), EOS Kiss X5 (Rebel T3i / 600D), EOS Kiss X50 (Rebel T3 / 1100D), EOS Kiss X4 (Rebel T2i / 550D), EOS Kiss X3 (Rebel T1i / 500D), EOS 70D, EOS 60D, EOS 7D	-	-